


EOL resistor to go in series taken from zone 30 terminal

Notes: Ensure the links between pins 4-5-6 are fully removed
The sounder interface module is not required.
When fully tested, cut ENG. TEST link and connect BATT LINK

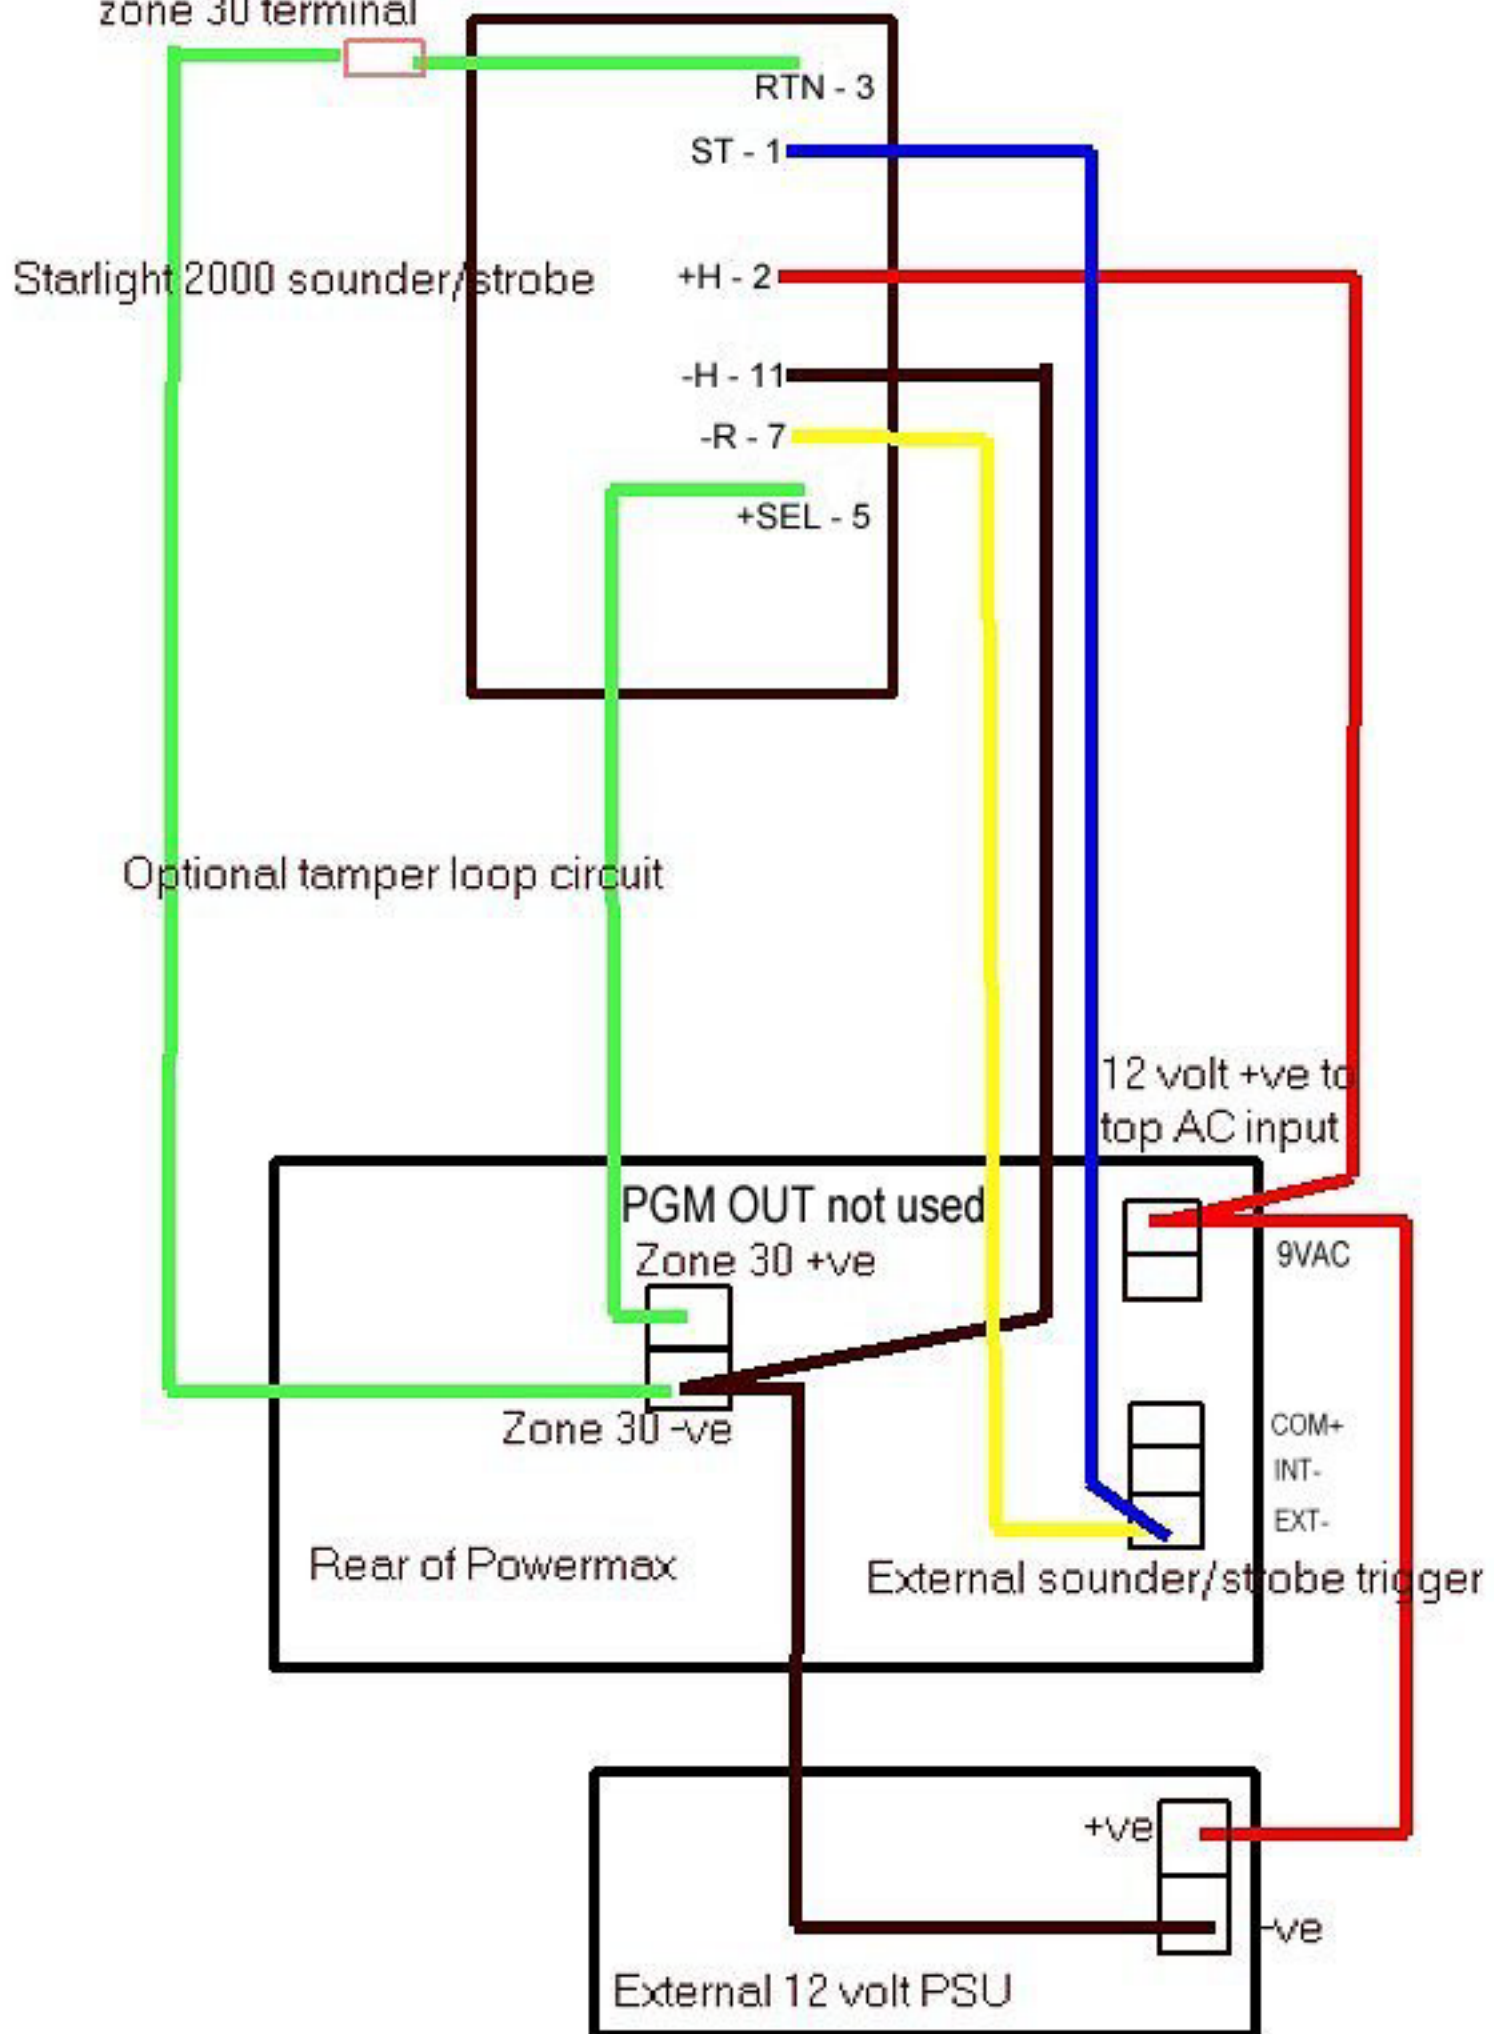

Powermax to Elmdene 2000 with External Supply c/w Battery.